


**Extended Toast Time Programming Instructions**

Note: Improper adjustments can affect the operation of the unit. DO NOT attempt to adjust any unlisted settings without authorization from your management. Each bread product must be adjusted independently on each toasting chamber.

Setting	Old Value	New Value
Compression Setting	30	24
Platen Temperature	550°F	545°F
Club Platen Temperature	530°F	530°F
Toast Time	17 sec	20 sec


1. To enter the program mode, press and hold the PRINCE CASTLE Logo button for 6 seconds.

NOTE: During programming, press the PRINCE CASTLE Logo button at any time to move backward one step in the program




The above screen will appear once the Programming Menu has been activated


2. A. Using the UP and DOWN Scroll Buttons, Scroll through the Main Menu to find the BUN Menu

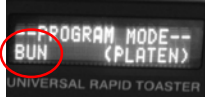


B. Press the INFORMATION button to select the product.




3. A. Use the UP and DOWN scroll buttons to scroll through the product's settings, and select Toast Time.




B. Press the INFORMATION button to select the desired setting.



C. Use the UP or DOWN arrow button to change the value of the BUN TIME setting from 17 to 20 seconds.



D. Press "INFORMATION" to save the changes.



Please ensure the "INFORMATION" button has been pressed. If the "INFORMATION" button is not pressed, changes will not be saved



# Universal Rapid Toaster 340-URTG2L

4. Use the UP and DOWN scroll buttons to scroll through the product's settings. Select PLATEN TEMP.



B. Press the INFORMATION button to select the desired setting.



C. Verify the platen temperature is set at 545°F. If the temperature is not set at 545°F, Use the UP or DOWN arrows to change the value to 545°



D. Press "INFORMATION" to save the changes.



Please ensure the "INFORMATION" button has been pressed. If the "INFORMATION" button is not pressed, changes will not be saved

6. Use the UP and DOWN scroll buttons to scroll through the product's settings, and select COMPRESSION.



B. Press the INFORMATION button to select the desired setting.



C. Use the UP or DOWN arrow button to change the value of the COMPRESSION setting to 24 seconds.



D. Press "INFORMATION" to save the changes.



Please ensure the "INFORMATION" button has been pressed. If the "INFORMATION" button is not pressed, changes will not be saved

5. Use the UP and DOWN scroll buttons to scroll through the product's settings, and select CLUB TEMP.



B. Press the INFORMATION button to select the desired setting.



C. Verify the club temperature is set at 530°F. If the temperature is not set at 530°F, Use the UP or DOWN arrows to change the value to 530°



D. Press "INFORMATION" to save the changes.



Please ensure the "INFORMATION" button has been pressed. If the "INFORMATION" button is not pressed, changes will not be saved

7. Press the PRINCE CASTLE Logo button several times to exit the Program Mode.

