



Core Bun Toaster (CBT)

Best Practices / Quick Reference Guide


SCAN FOR PRODUCT INFO



Tiny.cc/mcdcbt

Do Not Discard This Item
No se Deshaga De Este Objeto

Please Contact Prince Castle Tech Support To Receive Optimal Programming Adjustments.
Phone: 1-800-PCASTLE

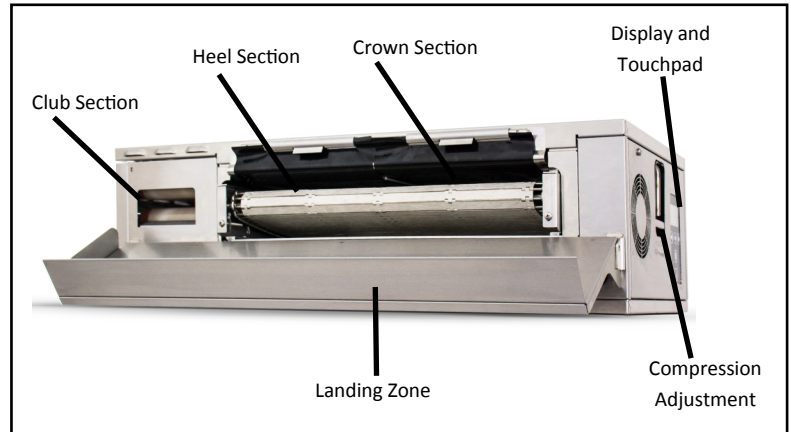

CBT Recommended Toast Settings

The following settings are recommended when using a Bun Compression setting of 3.

- Main Platen Temperature: 455°
- Club Top Platen Temperature: 500°
- Club Bottom Platen Temperature: 500°
- Toast Time: 22 Seconds

Changing Toast Settings

Follow the steps below to adjust toast settings.

1. To Enter Programming screens Press and hold the MENU button for 6 seconds. The PROGRAMMING VERSION screen will appear.
2. Press the RIGHT and LEFT scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, Press the OK Button, and then use the LEFT and RIGHT Arrows to adjust as needed. Press OK again to Save.
 - Language Options
 - Platen Temperature
 - Select F/C
 - Toast Time
 - Club Toast Time
 - LON Service Call
 - MFY Store
 - Service Codes
4. The Menu Button can be pressed at any time to exit.

Ordering Consumables

Consumables for the CBT are available for ordering through your local distribution centers. Use the WRIN Numbers below when ordering.

Replacement Release Sheets

- Quantity: 2 Sheets
- Prince Castle Part #: 353-575
- WRIN #: 07409-024

Replacement Teflon Belts

- Quantity: 2 Sheets
- Prince Castle Part #: 353-322
- WRIN #: 05623-012

PM Best Practices

Refer to the PR71 Maintenance Cards for Complete PM Steps for the Core Bun Toaster.

The Preventative Maintenance includes the following:

- Daily—Clean the Toaster and Inspect/Clean Release Sheets
- Monthly—Deep Clean Main Conveyor Belt using KAY QSR Heat Activated Grill & Toaster Cleaner.

KAY QSR Heat Activated Grill & Toaster Cleaner

- Quantity: Case of 4—32oz. Bottles
- WRIN #: 00301-171

Maintaining the Conveyor Belt is the most critical part of the PM Process. These belt must be cleaned monthly to ensure it is clean and free of damage.





Infrared Toaster (IRT)

Best Practices / Quick Reference Guide

SCAN FOR PRODUCT INFO



Tiny.cc/mcdirt

Do Not Discard This Item
No se Deshaga De Este Objeto

Please Contact Prince Castle Tech Support To Receive Optimal Programming Adjustments. Phone: 1-800-PCASTLE

IRT Recommended Toast Settings


The following are default

- Platen Duty: 68%
- Muffin Toast Time: 86 Seconds
- Bagel Toast Time: 50 Seconds

Changing Toast Settings

Follow the steps below to adjust toast settings.

1. To Enter Programming screens Press and hold the MENU button for 6 seconds. The PROGRAMMING VERSION screen will appear.
2. Press the RIGHT and LEFT scroll buttons to navigate through the different settings.
3. The different settings will appear in the following order. To change a setting, Press the OK Button, and then use the LEFT and RIGHT Arrows to adjust as needed. Press OK again to Save.
 - Language Options
 - Bagel Platen Duty
 - Muffin Platen Duty
 - Special Platen Duty
 - Select F/C
 - Bagel Toast Time
 - Muffin Toast Time
 - Special Toast Time
 - Special Mode Enable/Disable
 - Service Codes
4. The Menu Button can be pressed at any time to exit.

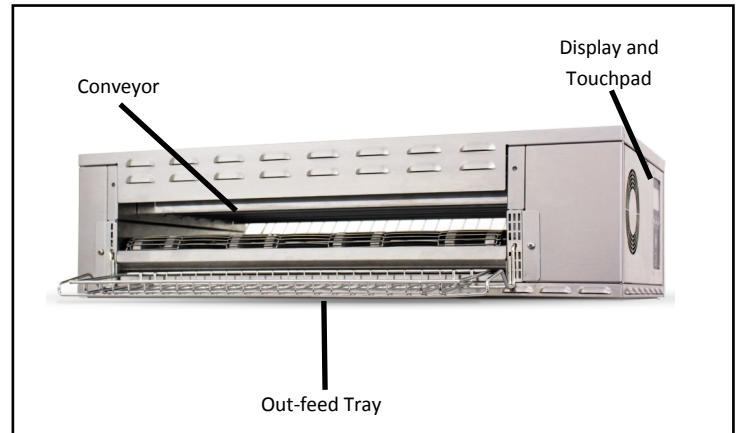

PM Best Practices

Refer to the PR70 Maintenance Cards for Complete PM Steps for the Infrared Toaster.

The Daily Preventative Maintenance includes the following:

1. Cleaning the Crumb Tray
2. Wipe Down In-Feed Rack
3. Wipe Down Out-Feed Rack
4. Wipe Off Exterior of Unit

It is critical that the PM is performed daily to maintain the functionality of the toaster.

