

## Prince Castle Vertical Artisan Toaster

### Model DCFT-ART-MCD Series

<b>Why</b>	To prevent belt from accumulating excess bread/sugar particles	
<b>Time required</b>	2 minutes to prepare	10 minutes to complete
<b>Time of day</b>	During Down time	For 24-hour restaurants: During Down Time

**Hazard icons**       Chemicals       Electricity

#### Tools and supplies



Bucket, clean and sanitized towels



Bucket, soiled towels



Sink Detergent Solution and Sanitizer Solution



Heat Resistant Gloves



McDonalds Approved Degreaser Solution

#### Procedure

##### 1 Power Off Unit


Ensure the unit is powered off before initiating any cleaning procedures. Allow unit to cool for at least 20 minutes before attempting to clean.

##### 3 Wipe Teflon Retaining Bracket

Remove Teflon retaining bracket by lifting straight up. Take the retaining bracket to the 3-compartment sink to wash, rinse, and sanitize.


##### 2 Wipe Down In-Feed Tray

While wearing a pair of heat-resistant gloves, wipe down in feed tray with a clean, sanitizer-soaked towel.

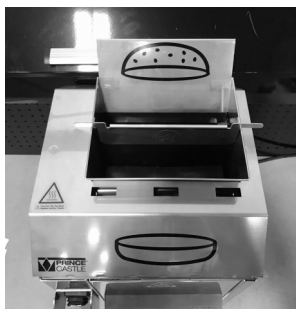

## 4 Remove Teflon Sheets

Remove the Teflon sheets from the toaster and place it on a clean, flat, dry surface.

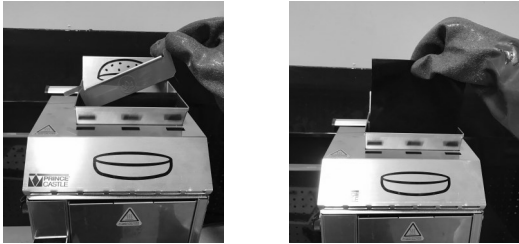

## 5 Clean Teflon Sheets

Spray a clean, sanitizer-soaked towel with degreaser solution then wipe down release sheets on both sides in one direction, away from where it is being held, being careful not to crease the sheet.

Rinse with a separate, clean sanitizer-soaked towel.



## 6 Clean Butter Wheel (If Equipped)

Follow the steps in PR76—Butter Wheel Daily Cleaning to clean the butter wheel

## 7 Clean the Conveyor Belts


- With power off, remove gloves from hands to unscrew and lift lid and open front conveyor door.
- Put heat-resistant gloves on to clean.
- Spray Approved Degreaser Solution onto a clean, sanitizer-soaked towel. Clean the front main conveyor belt. Rinse with a separate clean, sanitizer-soaked towel. Continue rinsing until all product residue is removed.
- Close front door, power unit ON, count 13 seconds to reveal unclean side of belt, power unit OFF, open door and repeat cleaning using the sanitizer-soaked towel sprayed with Approved Degreaser solution. Continue rinsing until all product residue is removed.
- Wipe down the inner panel of the conveyor access door with a clean, sanitizer-soaked towel sprayed with Approved Degreaser solution. Continue rinsing until all product residue is removed.
- Repeat the belt cleaning process for rear main conveyor belt, and rear inner panel. NOTE: the toaster may need to be pivoted to access the rear main conveyor belt



**8 Close the conveyor door(s).**


**9 Install the Clean Release Sheets**

Re-feed the clean release sheet back through the toaster, and reinstall the retaining bracket.

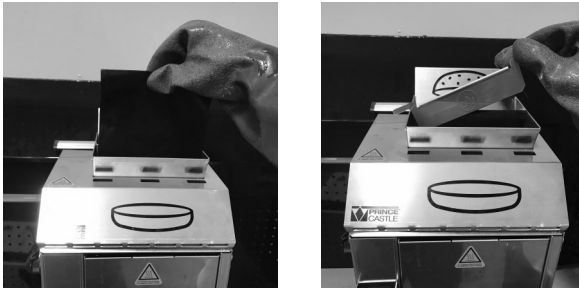

**10 Clean Landing Zone**

Wipe out crumbs from landing zone with a clean, sanitizer-soaked towel.

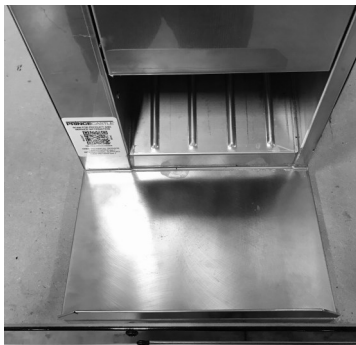

**11 Turn the toaster ON.**

Allow the toaster to warm up. The toaster is now ready to resume use.

