

Why To Keep dispenser clean

Time required 2 minutes to prepare 20 minutes to complete

Time of day At Close For 24-hour restaurants: During low volume

Hazard icons  Chemicals

Tools and supplies

Tools and Supplies Required



Bucket, Clean and Sanitized Towels



Bucket, Soiled Towels



Gastro norm Metal pan



Gloves, Neoprene



McD All Purpose Super Concentrate (APSC) solution

Procedure

- 1 To start cleaning the unit, press and hold the lock button for 5 seconds to prevent any unwanted dispenses during cleaning.



- 2 Remove drip tray from dispenser, separate splash guard and cup rest.



(continued)

- 3 Take splash guard and tray to a 3-compartment sink to wash, rinse and sanitize.



- 4 Let parts air dry.

- 5 Open cream dispenser door, pull pinch valve and turn counterclockwise to release cream tube.



- 6 Remove hopper with empty cream bag from unit.



- 7 Remove empty cream bag from hopper by unsnapping bag guard from hopper.



- 8 Remove bag guard from empty cream bag and dispose of the empty bag.



- 9 Take hopper and guard bag to 3 compartment sink to wash, rinse and sanitize.



- 10 Let parts air dry.

- 11 Spray all-purpose concentrate solution on a sanitized towel and wipe inside of the cabinet, the cold conductor, pinch valve, rubber gasket and angled metal bracket "cut here".



(continued)

- 12 Open dispenser door and inspect the door gasket to make sure there are no cuts or gaps.



- 13 Spray McD all-purpose super concentrate solution on a sanitized towel and wipe the gasket clean. Use a small brush to reach all corners and crevices



- 14 Discard of the used towel.

- 15 Snap bag guard onto a new cream bag.




- 16 Place cream bag inside Hopper.



- 17 Snap bag guard into hopper.



- 18 Slide hopper into the cabinet, if if cream bag is pinched between hopper and cold conductor, pull tube down to unpinch.

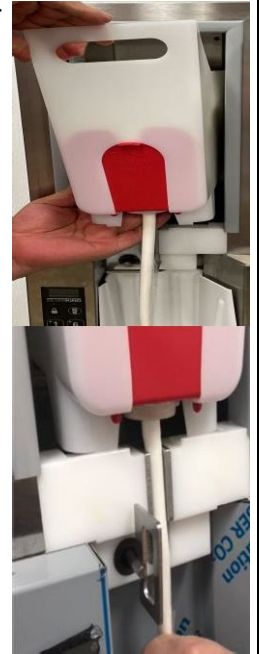

- 19 Remove wrapper and excessive plastic from cream tube. Pull and turn pinch valve clockwise to release and pinch cream tube.



- 20 Close door.

- 21 Spray a clean sanitized towel with APSC to wipe down control panel.



(continued)

- 22** Place splash guard back into the unit and place cup rest on splash guard.



- 23** Cut cream tube on an angle with scissors along the angled metal tab.



- 24** Press and hold the lock button for 5 seconds to start dispensing cream.

