

Why?	Make sure dispenser is dispensing correct amount of product.	
Time required.	2 minutes	5 to 10 minutes to complete.
Time of day	Beginning of day	For 24-hour restaurants: During low volume
Hazard icons		

Tools and supplies



Scale



Small container

Procedure

- 1 Place container on the scale and press tare (Zero).



- 2 Press and hold the lock button and tap the ice coffee button on the dispenser.



- 3 After the "CAL DISP PRESS 9" appears in the display, move the container under the tube and press 9.




- 4 Place the container on the scale and note the reading.



- 5 If reading on scale is same as in the display, press 6 to confirm and then 7 two times to exit menu.

(continued)

- 6 If reading on scale is different from display, on the display press up (1) or down (2) until the number on the display matches number on the scale and press 6 to confirm.

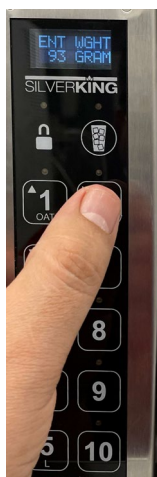

- 7 On the scale press tare (Zero) again



- 8 Move container under the tube and press 9 to perform second calibration shot.



- 9 Place container on scale and note reading.



- 10 If reading on scale is same as display, press 6 to confirm and 7 two times to exit menu. If not repeat steps 6-9.