


Programming the UHC6PT-22MCD

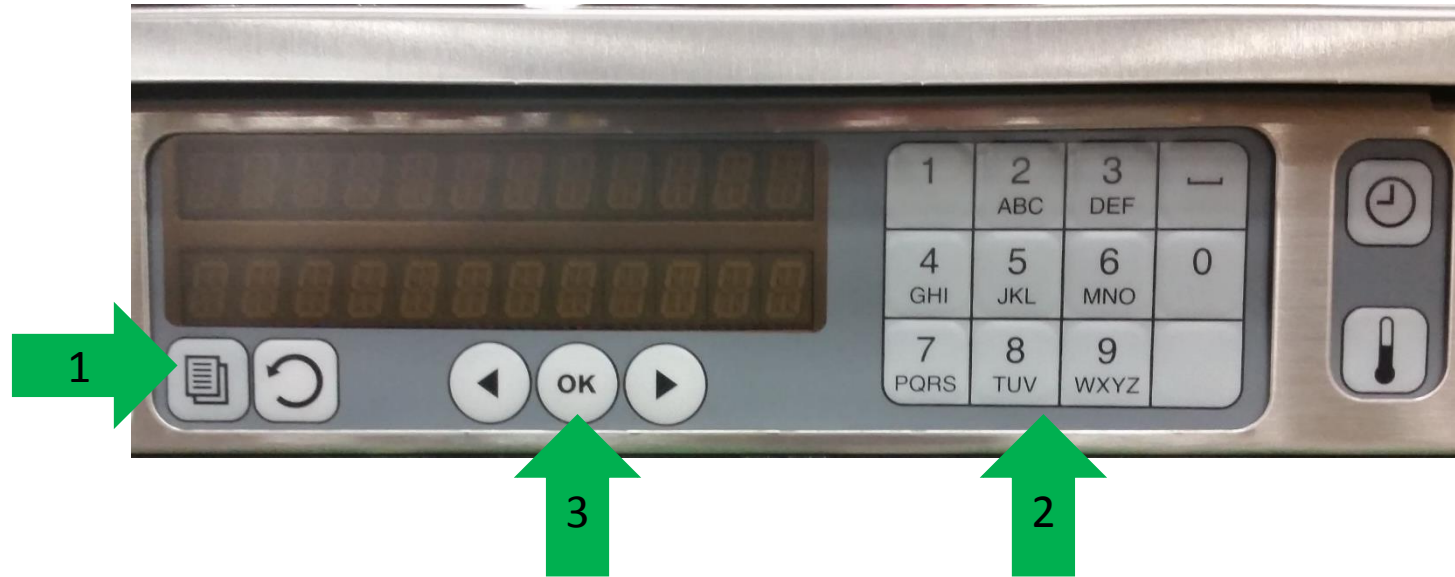

1. With Power Switch turned on, press and release the Program button.
2. Display will read "Enter Code", enter 1955
3. Press and release the OK button.

Programming a new item

Screens along left side of cabinet will display the following:



Select "Items" by pressing and releasing the timer button.



Select "CHG ITEM" by pressing and releasing the timer button

Changing Hold Time

1. Press Hold to select the hold time adjustment.
2. The hold time can now be adjusted at the keypad.
3. After setting the hold time press and release the Back button.
4. Press and release the back button 3 times to return to operation.

